


OUTERIMPACT

Instructions for mounting an Outerimpact Red Dot Sight Adapter on your firearm.

WARNING: Never remove or install bases, rings, or scope on a loaded gun. Check to be sure firearm is unloaded and safety is engaged.

1. Visually inspect your firearm for burrs around mounting holes and remove if necessary.
2. Remove all grease and oil from: base mounting surfaces, contact surfaces, and tapped holes in the receiver.
3. Place single piece sight adapter base on the receiver. Make sure all holes line up correctly. Using a T-10 Torx wrench, loosely install mounting screws. After confirming, once again, that sight adapter base fits properly, tighten Torx screw to 20 in-lbs of torque. (Warning: Make sure you are using in-lbs and not ft-lbs)
4. Use supplied alignment pin(s) (2 included) to align sight with Outerimpact Adapter. Utilize graphic below to locate correct pin and screw holes.

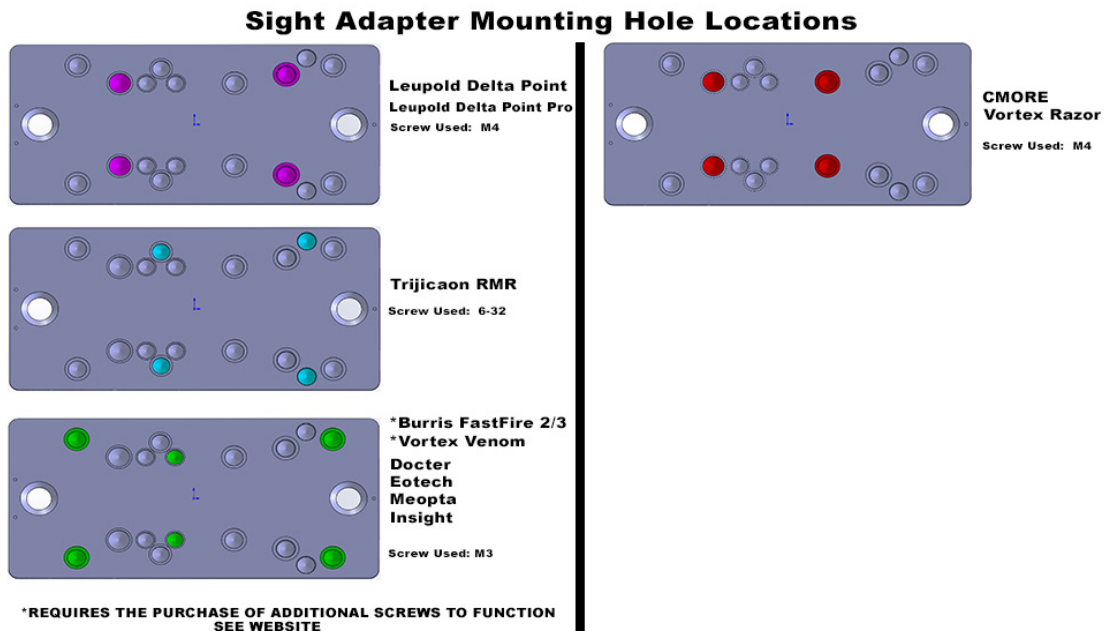

****NOTE**** Red dot sights may over-hang beyond the perimeter of the adapter.