

OUTERIMPACT


GLOCK® M.R.A (Modular RedDot Adapter) Mounting Instructions

Utilize a certified Gun Smith to install adapter. It is possible to install adapter if a Gun Smith is not accessible, but it is recommended that adapter be installed by a Gun Smith.

WARNING: Never remove or install components on a gun before ensuring the gun is not loaded and the chamber is clear.


STEP 1: Install Outerimpact Dovetail onto slide.

Dovetail and Dovetail-Screws are located in "DVT" Package

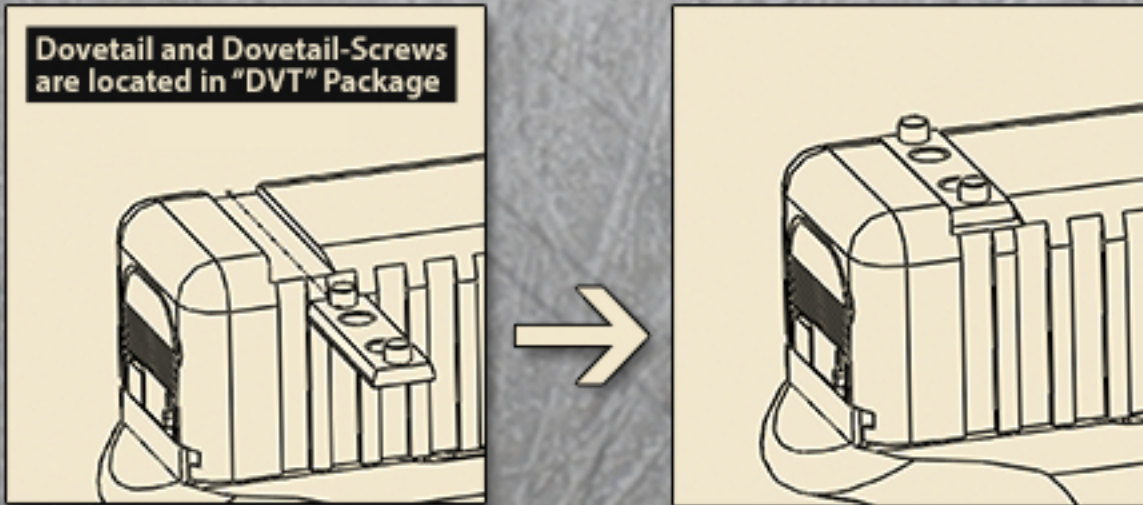

STEP 2: Test fit the Red Dot sight to Outerimpact adapter, utilizing Red Dot Adapter Chart. Note: make sure screws do not stick out beyond bottom of adapter. After test fitting remove Red Dot sight from adapter.



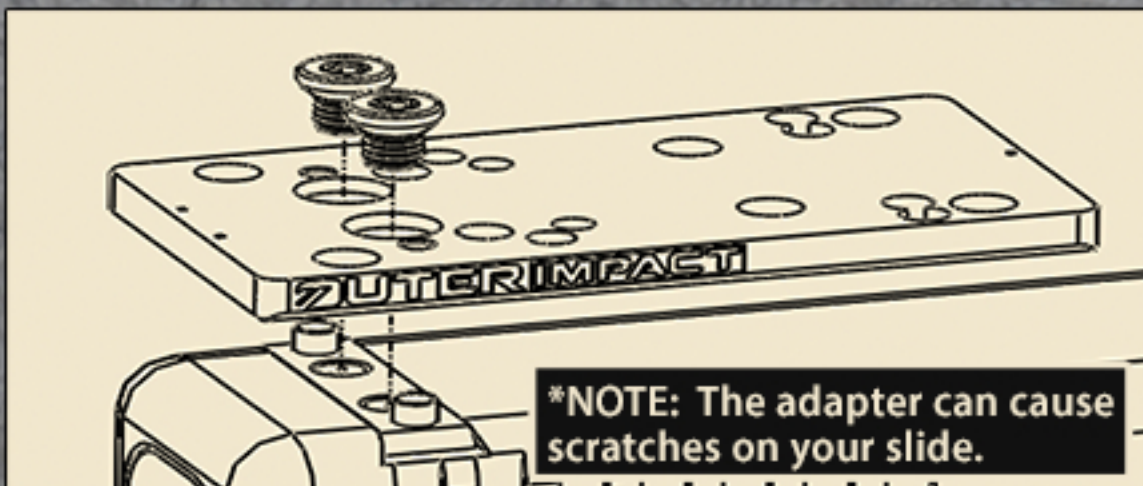


STEP 3: Secure sight adapter to dovetail with supplied weaver screws. Torque to 25 in/lbs




***NOTE:** The adapter can cause scratches on your slide.



NOTE: THE ADAPTER BASE PLATE HAS AN INTENTIONAL CURVE. THIS CURVE WILL FLATTEN OUT WHEN MOUNTED TO THE FIREARM.

STEP 4: Using the Screws/Pins and mounting pattern identified in Step 3, mount the Red Dot sight to the adapter and torque to 12in/lbs

| MOUNTING PATTERNS: | SIGHT Manufacture | SIGHTS Model | SCREWS USED |
|--|------------------------------|-----------------------|--|
| All Mounting Patterns Utilize the 2 Alignment Pins  | | | |
|  | VORTEX BURRIS | VIPER FAST FIRE 3 | M3 x 8mm  |
| | BURRIS DOCTOR INSIGHT EOTECH | FAST FIRE 2 MRDS MRDS | M3 X 6mm  |
| | VORTEX | VENOM | M3 X 6mm  |
| | | | |

| | | | |
|---|----------|-----|---|
|  | TRIJICON | RMR | #6 SCREWS  |
|---|----------|-----|---|

| | | | |
|---|---------|-----------------------------|----------------------------|
|  | LEUPOLD | Delta Point Delta Point Pro | SIGHT SUPPLIED SCREWS WORK |
|---|---------|-----------------------------|----------------------------|
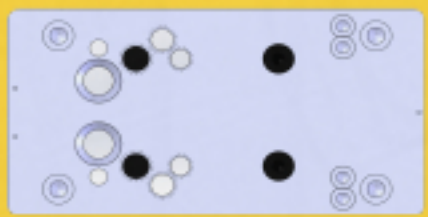
| | | | |
|---|--------|-----------|---|
|  | VORTEX | RAZOR | M4 SCREWS  |
| | CMORE | RTS & STS | SCREWS NOT DETERMINED |

UTILIZE LIQUID THREAD LOCKER UPON FINAL INSTALLATION OF ALL THREADED FASTENERS.