


## Sig® P365 M.R.A. (Modular Red Dot Adapter)

### Mounting Instructions

**WARNING:** Never remove or install components on a gun without ensuring the gun is not loaded and the chamber is clear.

Step 1: Remove existing rear sight from slide.

Step 2: Install Outerimpact dovetail onto slide.

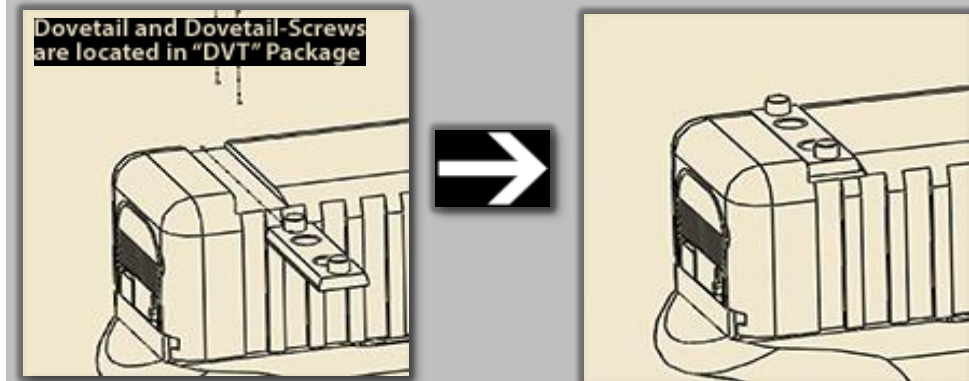

Step 3: Test fit the Red Dot sight to Outerimpact adapter, utilizing adjacent chart. Note: Make sure screws do not stick out beyond bottom of adapter. After test fitting, remove Red Dot sight from adapter.

Step 4: Secure sight adapter to dovetail with supplied weaver screws. Torque to 25 in/lbs.



Note: The adapter plate has an intentional curve. This curve will flatten out when mounted.

While it is possible to install this mount without the use of a Gun Smith, we recommend using a certified Gun Smith for installation.

Step 5: Using the screws/pins and the mounting pattern identified, mount the Red Dot sight to the adapter and torque to 12 in/lbs

Mounting Patterns	Sight Manufacturer	Sight Models	Screws Used
	Vortex	Viper	M3 x 8
	Burriss	Fast Fire 3	
	Burriss	Fast Fire 2	M3 x 6
	Doctor	MRDS	
	Insight	MRDS	M3 x 6
Eotech	MRDS	M3 x 6	
Vortex	Venom		

The RED circles indicate locations for 2 included alignment pins  
The BLACK circles indicate locations for mounting screws -- Torque to 12in/lb

	Trijicon	RMR	#6
--	----------	-----	----

	Leupold	Delta Point Delta Point Pro	Sight Supplied Screws Work
	Shield	RMS	Additional Screw Purchase required

	Vortex	Razor	M4
	Sig Sauer	Romeo 3	
	CMORE	RTS & STS	

Utilize liquid thread locker upon final installation of all threaded fasteners